

# OPERATING & SAFETY GUIDE

## FRIDGE TRAILER UNIT



### GENERAL SAFETY

Contact Blue Sky Event Hire for information and advice on the suitability and safety of this type of equipment. There is a risk of injury if you do not follow the instructions printed in this guide.

This equipment should only be used by a competent adult who has read and understood these instructions. Anyone with a temporary or permanent disability should seek expert advice before using the equipment.

Keep all children, animals and bystanders away from the trailer. Never use the equipment if you are ill, tired or under the influence of alcohol or drugs. Never operate electrical switches with wet hands.

Injury hazard from rotating fan blades – keep hands away from fan blades.

Components such as condenser, evaporator and tubes may still be hot from operation – allow sufficient cooling time before touching the refrigeration unit.

Always switch off and unplug the equipment from the power supply before moving or cleaning. Check the equipment before use, if it shows signs of damage request a replacement.

### ELECTRICAL SAFETY

The equipment is designed to plug directly into a standard 240volt, 13 amp socket. Make sure the equipment and power socket are switched off before plugging into the power supply.

If the equipment fails to operate or the power cable or plug becomes damaged, contact Blue Sky Event Hire. Never try to repair the equipment yourself.

Keep the power cable out of harm's way. Extension leads should be unwound fully, never run them through water, over sharp objects or where they may be a trip hazard.

Use a suitable RCD (Residual Current Operated Device) to reduce the risk of electric shock.



The symbol above indicates a hazardous situation that, if not avoided, could result in permanent damage and / or personal injury. Switch off the unit and contact Blue Sky Event Hire.

### INTENDED USE

The trailer refrigeration unit is not suitable for use in areas where there is a risk of explosion or fire as the liquid refrigerant produces toxic gases in the presence of an open flame or electrical short circuit.

The trailer refrigeration unit is not equipped to withstand aggressive atmospheric conditions.

Ensure good ventilation of the unit, providing air circulation and access for any maintenance.

Do not expose the trailer refrigeration unit to direct sunlight or rain.

Ensure proper air circulation within the trailer when loading the trailer and make sure you do not block the evaporator.

### OPERATING GUIDE

The trailer will be delivered to your required position (within reach of a power point) levelled and secured with the refrigeration unit fitted.

Once in position, the delivery driver will attach locks to the wheel and the towing hitch so that the trailer cannot be moved or stolen during the hire period.

The delivery driver will set the temperature of the unit to suit your requirements and switch the unit on.

A key will be provided for the door of the unit, it is recommended that the door be locked at all times when access is not required. The door should be kept closed when access is not required to prevent temperature fluctuations and possible defrost activation.

### CLEANING

Never use abrasive substances or flammable solvents such as alcohol, benzene or thinners for cleaning the trailer, just wipe with a damp cloth.